


# Hanger

## Assembly Instructions

The hangers are designed to be multifunctional. One hanger may accommodate up to 3 different CPO products. The hangers come assembled. You will only need to install the hanger on the slatwall.

### Identifying the Fasteners

In your shipment, you will find a bag containing the following fastening items (pictured at right): bolts and flat nuts. These items are to be used for attaching the equipment hangers to the slatwall panel.

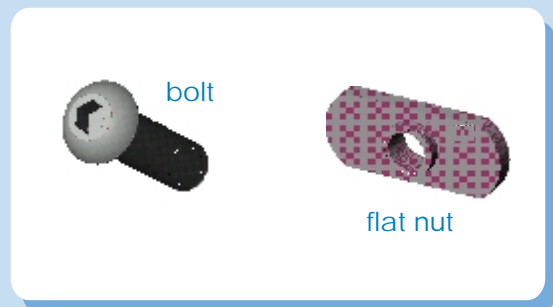

### Attaching the Hanger

The following instructions are generalized. They will work with any hanger.

1. Put a bolt through the open hole in the hanger so that the button head is on the front side. *Figure A.*
2. Loosely thread a flat nut on the bolt from the back side. You only need to make 1 - 2 turns. *Figure B.*
3. Repeat steps 2 and 3 for each bolt hole on your hanger.
4. From an edge of the slatwall panel, slide the hanger onto the slatwall by feeding the flat nut into the wide part of a slot. *Figure C.*
5. Slide the hanger where you want it positioned on the slatwall.
6. Secure bolts with a hex wrench turning clockwise.

Figure A

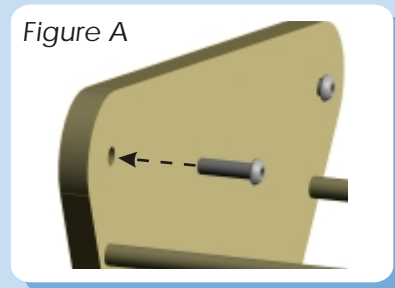


Figure B


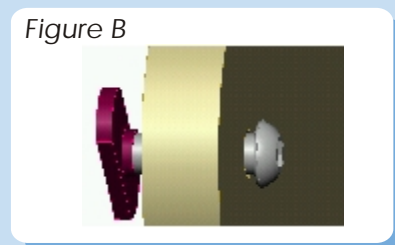


Figure C

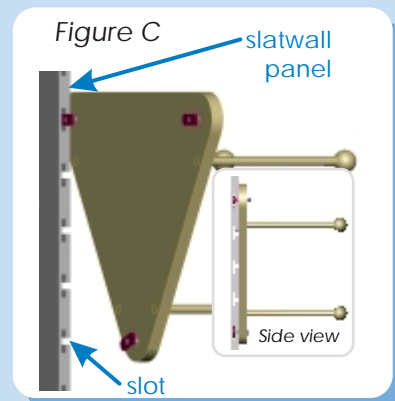

Visit us at [cposcience.com](http://cposcience.com). If you need technical assistance, please call 866.588.6951.